




1/3

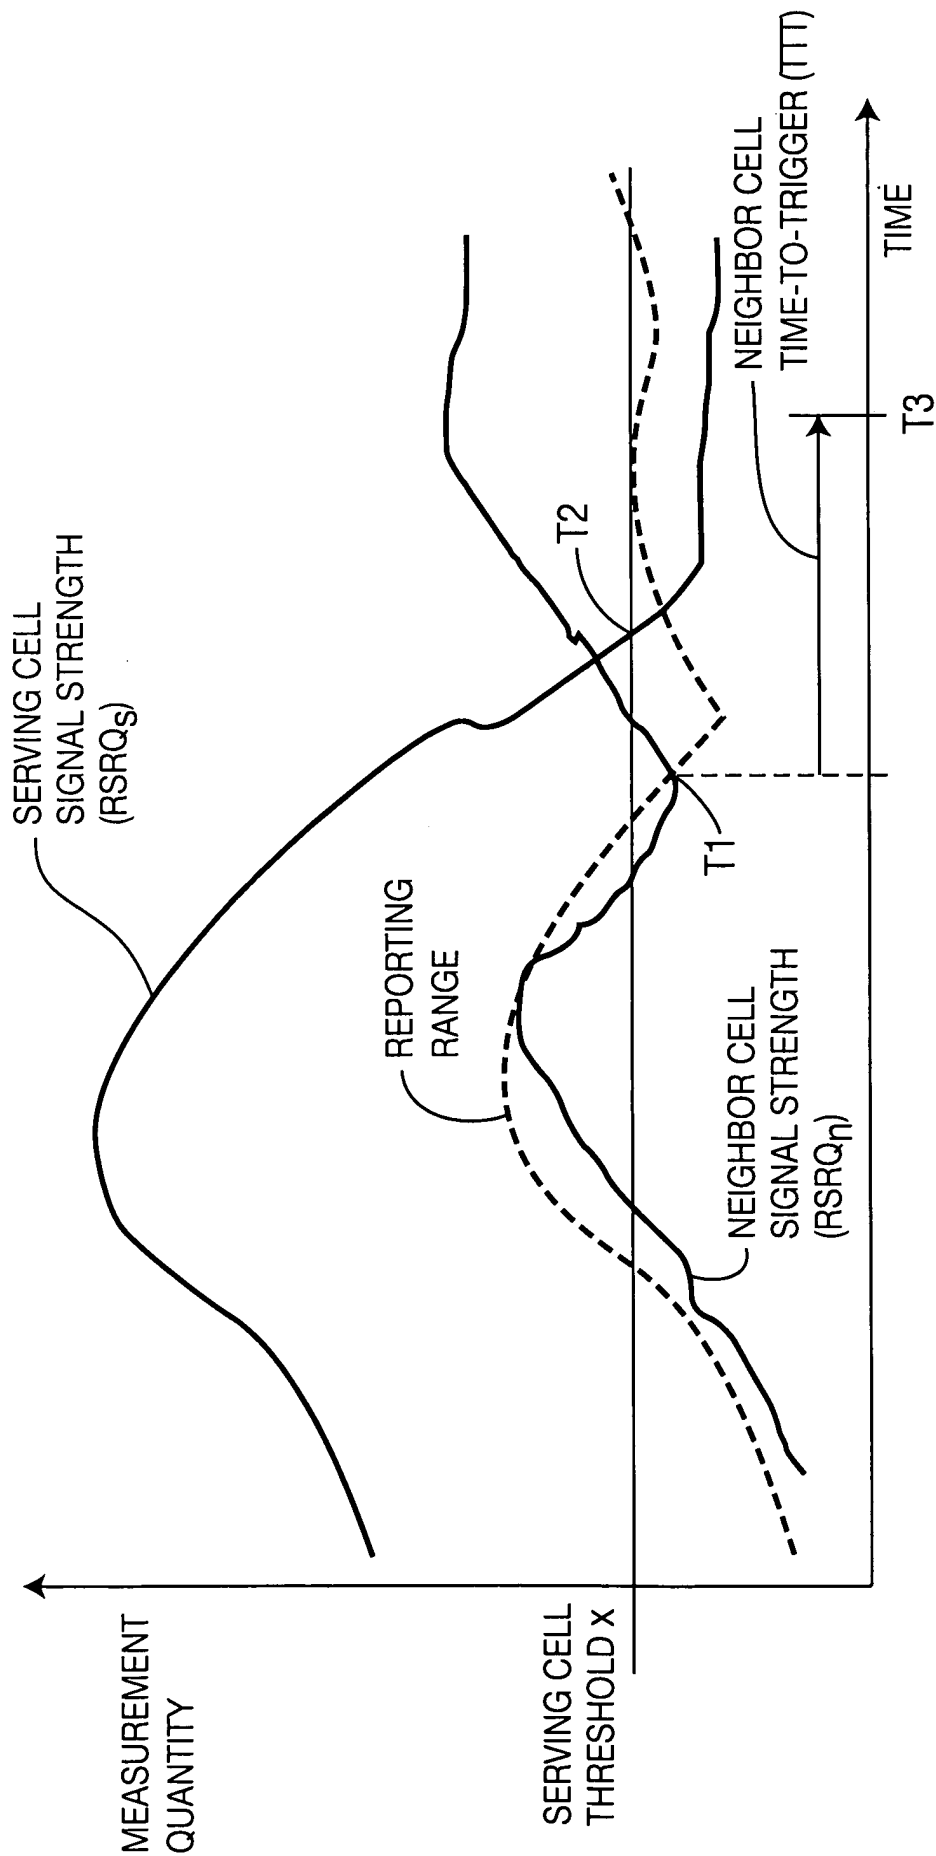


- T1: START TTT WHEN SIGNAL STRENGTH OF NEIGHBOR CELL RISES ABOVE REPORTING RANGE.
T2: SEND MEASUREMENT REPORT WHEN SIGNAL STRENGTH OF SERVING CELL FALLS BELOW SERVING CELL THRESHOLD X.
T3: TTT EXPIRES.

FIG. 1

FIG. 2

200

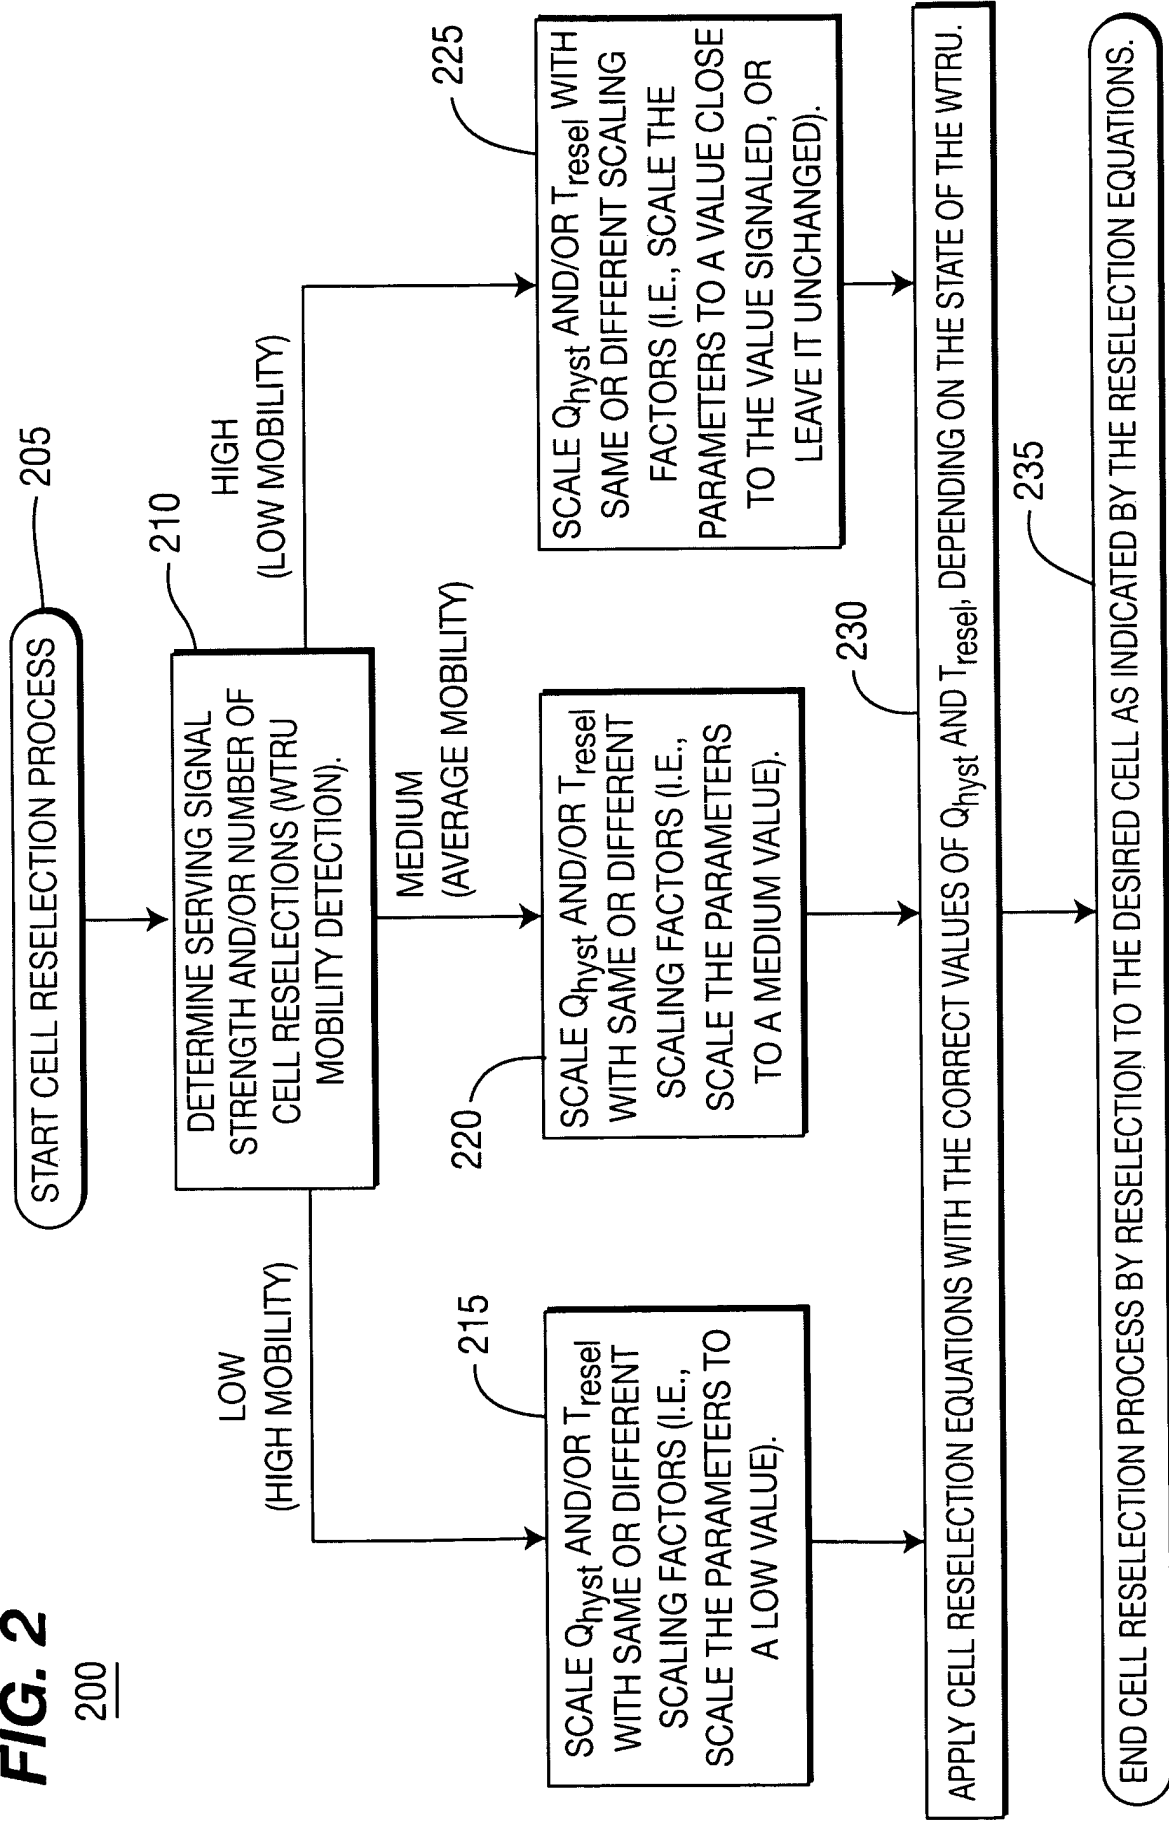

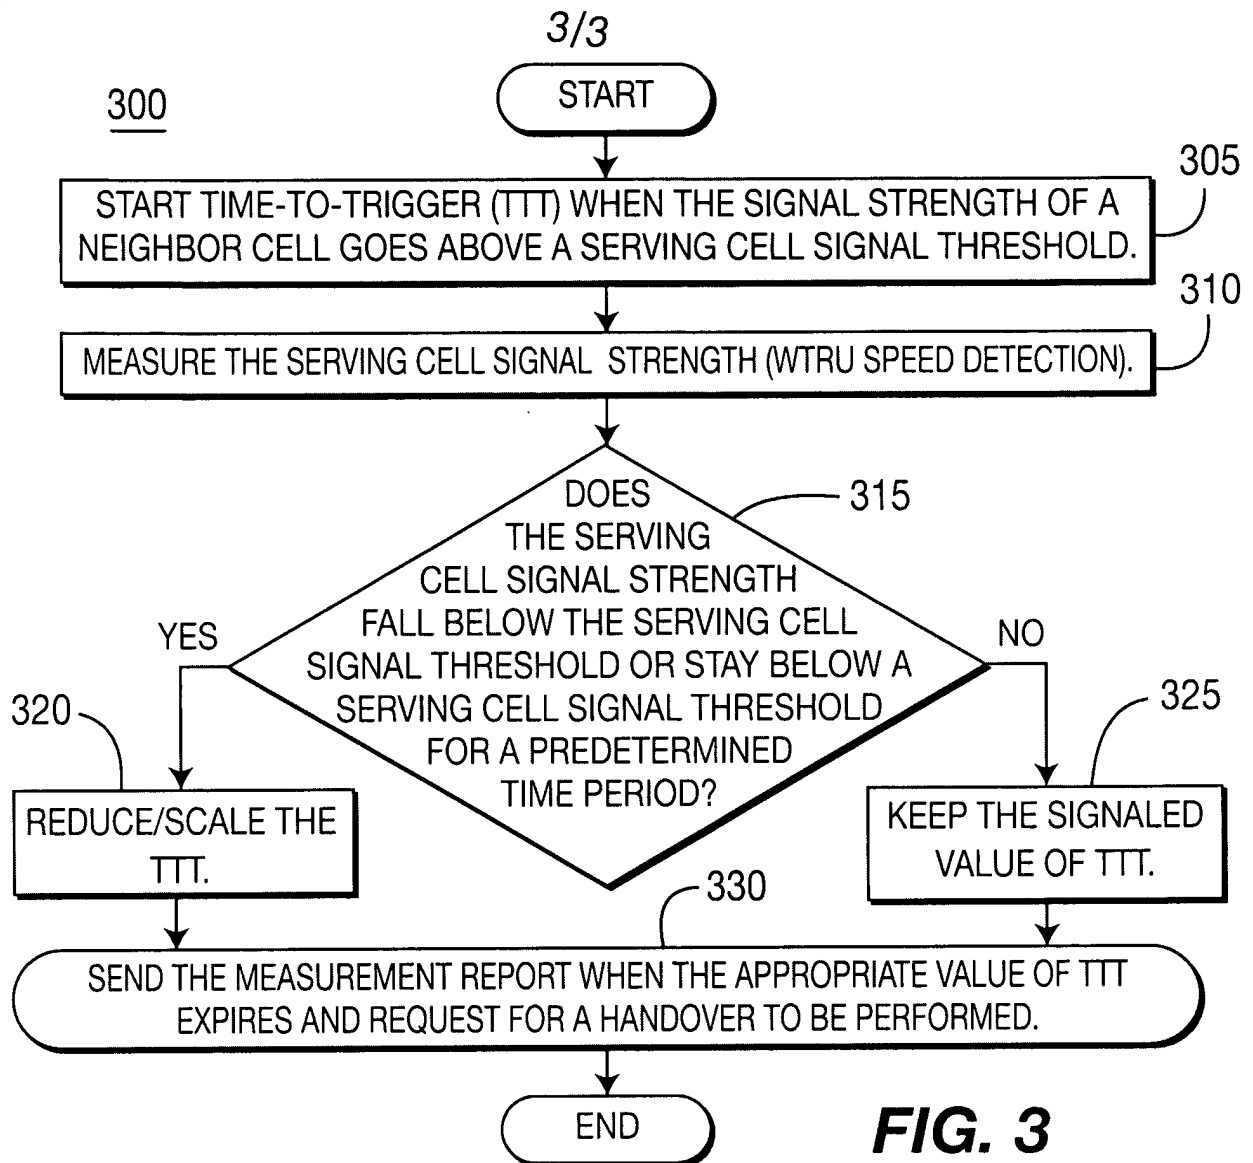


FIG. 3

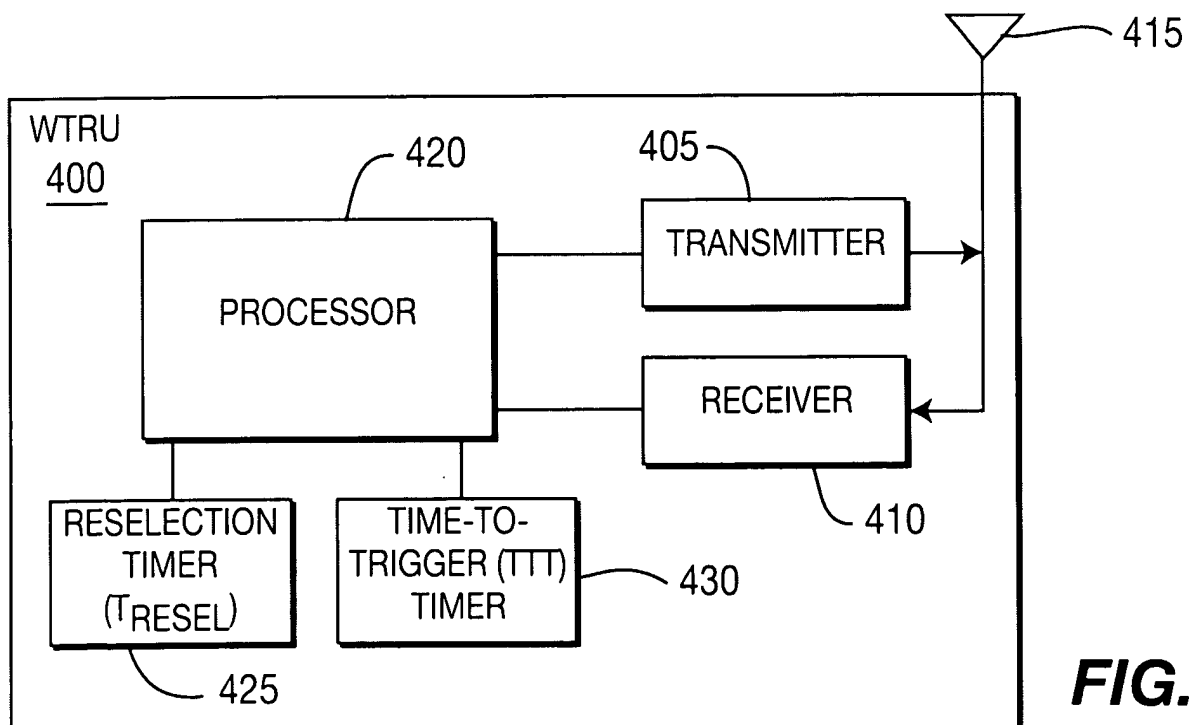


FIG. 4